

Speaker Bridge

Troubleshooting Guide



The Alpine unit wire for the Right speaker plus terminal may be a Blue-with-Brown stripe **OR** a Blue only wire

Issue:

Speaker and Earphone do not work in either switch position

1. Left speaker check Red wire from speaker bridge not making good connection to Yellow/Brown wire from Alpine unit (Alpine speaker Left Plus).
2. Right Speaker check Blue wire from speaker bridge not making good connection to Blue/Brown or Blue only wire on alpine unit (Alpine speaker Right Plus).

Issue:

External speakers work when switch is in the Speaker Position but earphone does not work when selected on the switch.

1. Left earphone check connection from speaker bridge black wire to Alpine Yellow/Red wire (Left Minus connection).
2. Right earphone check connection from speaker bridge white wire to Alpine Blue/Red wire (Right Minus Connection).



Switch position
for speaker
output

*If still having Problems contact
John at Motochello for support.*

775 / 782-2203

john@motochello.com

support@motochello.com



Switch position
for headset or
earphones



MotoChello, Inc. • Gardnerville, NV • 775 / 782-2203

www.motochello.com

©2018 MotoChello, Inc.