 
 


# Start Up Guide

After installing the MC-100 system and connecting your devices to their relative ports, you may use this guide to set up the system for the first time use.

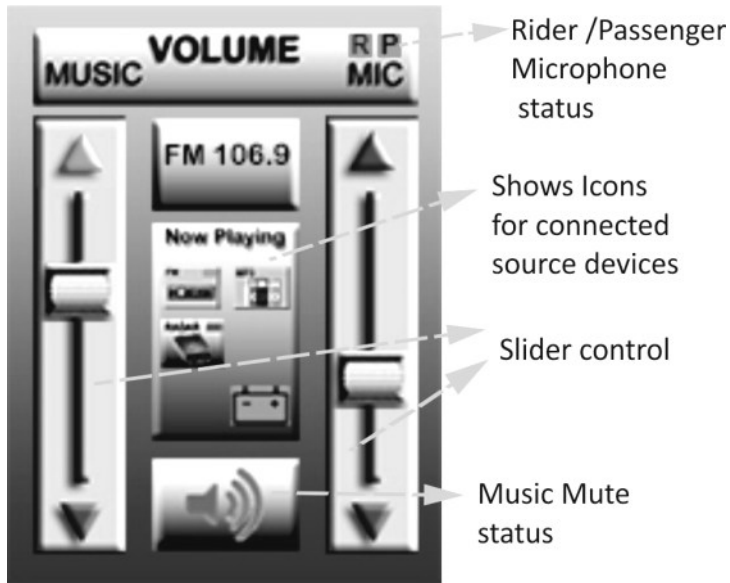


Main Display Screen

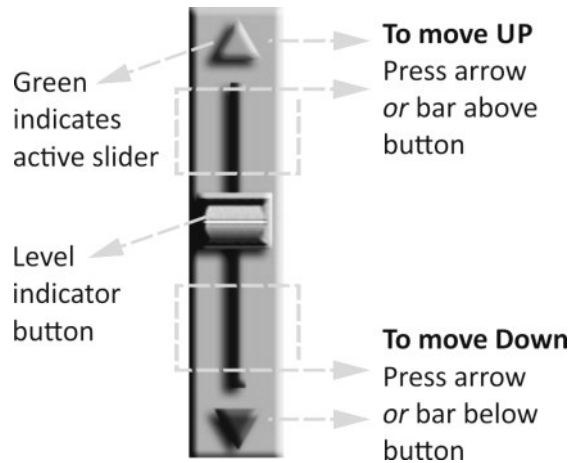

Slider Bar

For a complete explanation of various functions and their controls, please refer to the Users Guide.

*Please note: The screen has been calibrated for use with gloved hands. If operating the screen with bare hands, you may need to press a little firmer than normal. This is not a problem with the system.*

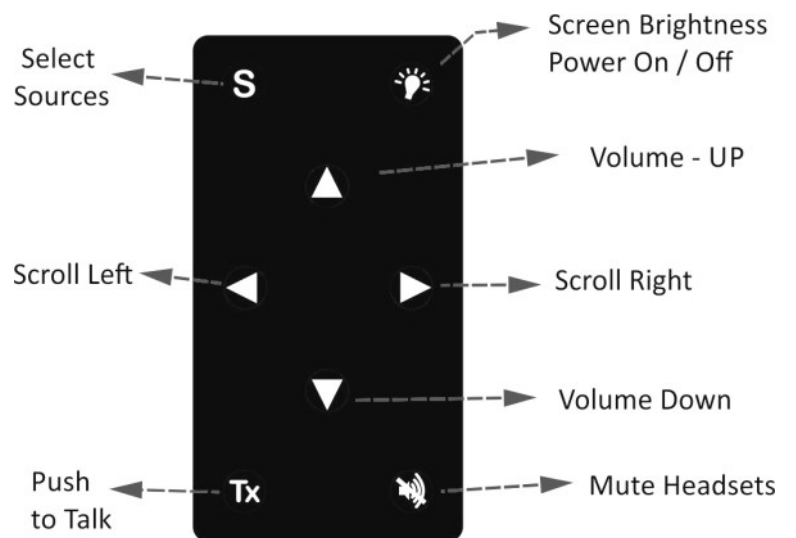

Button Panel

## Select Source Names



Turn the system on by pressing the brightness button and holding it until the screen starts up.



Press the "S" button to bring up the Sources screen OR press the "Now Playing" box on the screen



Press the "Set Up" icon on the display



Press the Source Icons button on the display



Press the Aux1 button (top left location) to select the icon to use for the device connected to the Aux1 port. Press the button repeatedly to scroll through a list of icon choices. When you find the icon you want to use, simply stop there and go on to the next port or leave the page by pressing the Exit Set-Up button on the screen. The icon displayed will be selected.

EXIT SET-UP



Press the Aux2 button (top right location) and repeat to select an icon for the Aux2 port.



Press the Aux3 button (mid left location) and repeat to select an icon for the Aux3 port.

## Using the FM Radio



From the main screen, you will see a button that says "Radio Off". Press the "S" button on the panel OR the "Now Playing" box in the center of the screen to go to the source selection icons.



Press the Radio icon (upper left location) to turn the radio ON. (a green light will appear over the icon to indicate it is active).

EXIT SOURCES

Press the "Exit Sources" bar at the top of the screen OR the "S" button to return to the main screen. The Radio screen button will now say "FM" and the station number.



FM 96.5

Press the FM screen button to bring up the radio controls screen.



Since no stations are yet preset, press the double arrows on the screen to go to the Next (Right/Up) or Previous (Left/Down) stations to be found by signal strength. The new station number will



When you find a station you want to remember, press and hold a numbered button on the screen until the text appears on the FM button that says "Preset" and the number of the button you

## Equalize Device Volumes to match the radio volume



Turn on the FM radio, following the above procedure and tune to a radio station with a strong signal. Set the listening volume to a pleasant level.



(note: if you do not have an antenna installed, you may plug the 3.5mm /6 ft. audio cable (included) into the antenna jack. Stretch out the cable and hide under your fairing.



Press the "S" (Source) button to go to the Source menu



Turn on your Aux1 source by pressing the icon that represents it. A green light will appear over the icon to indicate that it is "On"



Press and release the Set-Up button to display the Set-Up Options screen



Press and release the Input Volume icon on the screen



Adjust the Aux1 Volume Slider until the device volume is close to your radio listening level



Press and release the Config Levels button to return to the Source Menu



Alternate between the Aux1 device and the FM radio, adjusting the Aux1 volume until they sound the same to you. (turn Aux1 OFF and turn the FM radio ON - then reverse the procedure of ON/OFF)



Repeat the procedure for the Aux2 and Aux3 ports until all of your devices sound the same to you. *Note:* You will need to repeat this procedure if you change or relocate devices.

## Set-up Phone (if using a Garmin Zumo® GPS on Aux1)



From the Set-Up screen, press the Phone Set-up button on the display



Press the red "Phone is Disabled" button on the screen. The button will change from red to blue with the label "Phone is Enabled".



Note: To use the phone, you will need to have the GPS turned on. You still need to answer the phone by accepting the call through the Zumo® .



When a call comes in, press the Mute button (Speaker icon on the Display Screen) for 2 seconds and the system will automatically go into phone mode by muted music to accept the call. Then accept the call from your GPS and begin speaking. When you finish the call, press and release the Mute button (Speaker icon) and your music will return to it's previous setting.



## If 2-Way Radio is Connected



Press "S" button on the Display Button panel to go to the Sources screen



Press the FRS radio icon to turn the 2-way radio ON



Press the "S" Button again to return to the main Volume menu screen



Adjust the Microphone volume to your desired level



From the Volume screen, press the LEFT Arrow button on the panel to go to the 2-Way radio screen.



Turn the volume on your 2-way radio to the maximum volume level



Have a helper transmit to you. Adjust the receive volume level for the MC-100 using the UP and Down arrows until the volume is at the desired level.

## To Save your settings *(for your personal default settings)*



Press and release the "S" button to bring up the Source Menu



Press and release the Set-Up icon to go to the Set-Up options screen



Press and release the SETTINGS Save/Restore button icon



Press and release the SAVE User Settings button icon.

After settings have been saved, the MC-100 will return to the Source menu.

## To Recover Stored settings



Press and release the "S" button to bring up the Source Menu



Press and release the Set-Up icon



Press and release the USER Restore button icon



After settings have been restored, the MC-100 will restart with the saved settings