


MC-200 Screen Menu Navigation Map

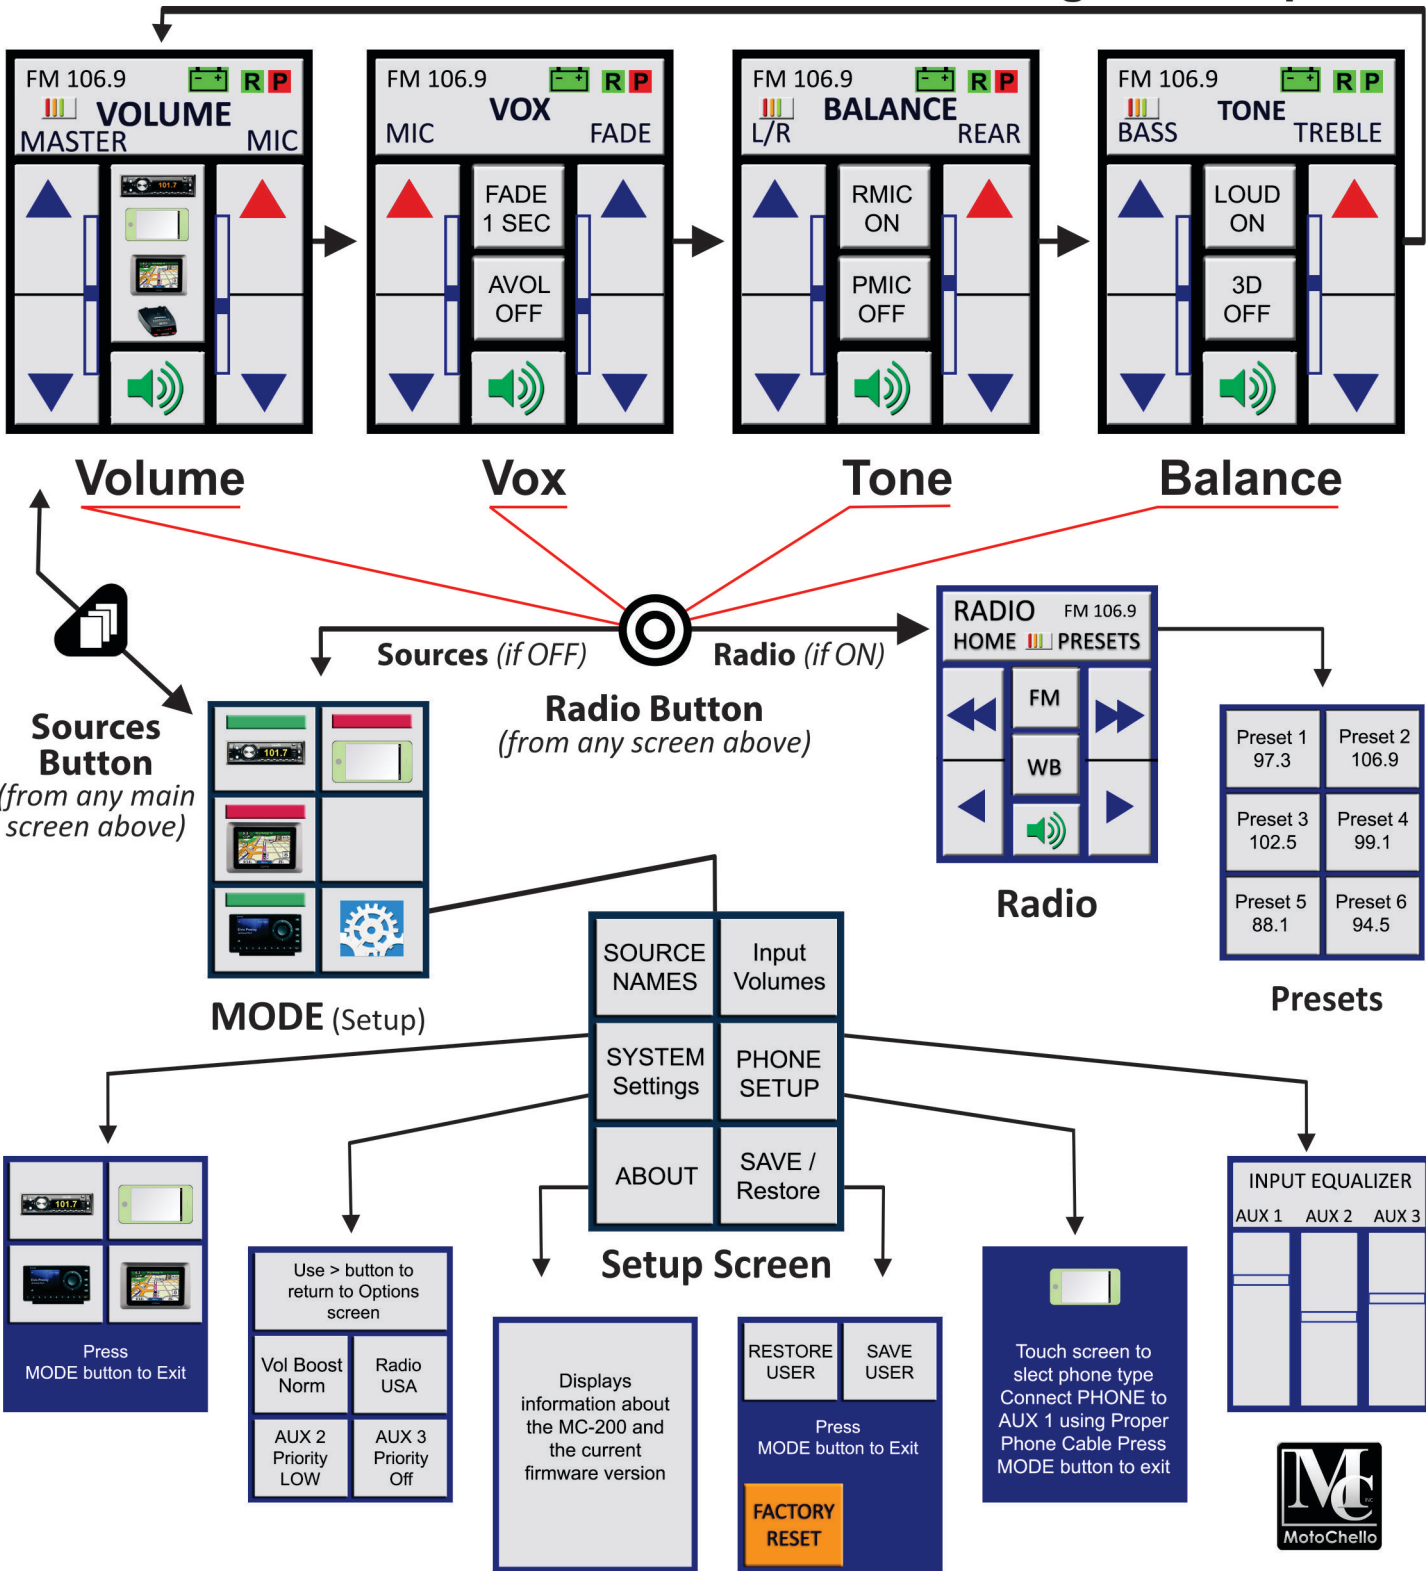

Tip!

Note: Press the RIGHT or LEFT side of the menu bar to move forward or backwards through the screens (Hidden buttons) After 30 seconds of inactivity the system will return to the main Volume screen EXCEPT when using the setup functions.

