

Posi-Connector Installation


Instructions for installing the Posi-Tap[®] Connector

Instructions provided by RocketMoto - www.rocketmoto.com




Posi-Twist:

1. Strip all wires to be inserted 3/4" (19mm).
2. Twist all wires together.
3. Completely unscrew the top from the Posi-Twist.
4. Feed the twisted wires through the bottom portion of the Posi-Twist.
5. While ensuring the wires do not slip out of the bottom of the Posi-Twist, attach the top and tighten.

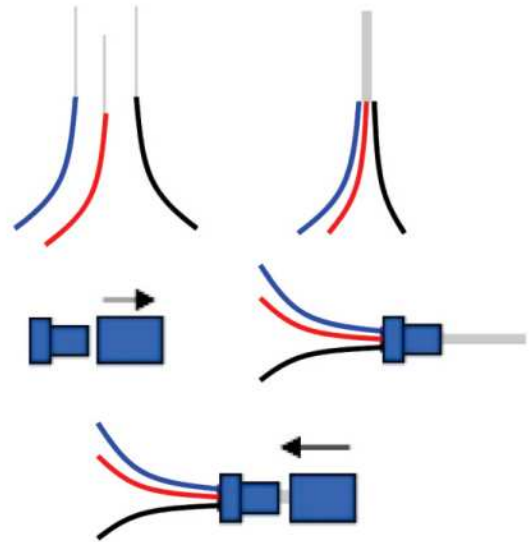


Posi-Tap:

1. Strip the wire to be connected 3/8" (10mm).
2. Unscrew the cap of the Posi-Tap (gray or large end).
3. Slide the wire you wish to tap into through the slot in the cap.
4. Re-attach the body of the Posi-Tap and tighten.
5. Attach the other wire to the bottom using the same method as a Posi-Twist.

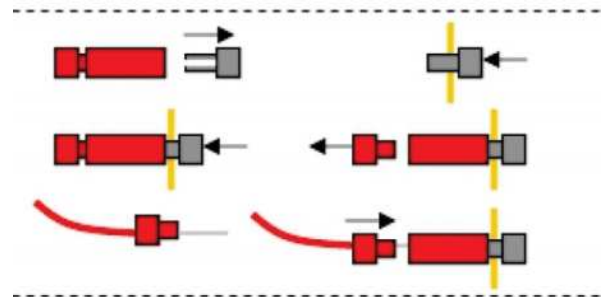

Posi-Lock:

1. Strip all wires to be inserted 3/8" (10mm).
2. Attach the wires to the screw-in connectors using the same method as Posi-Twist.

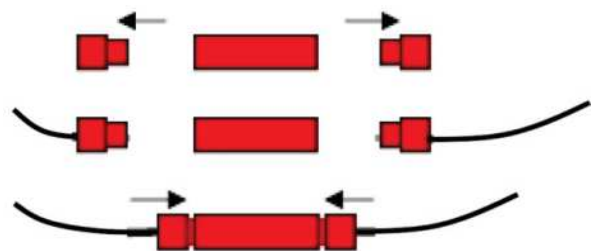

775-782-2203
www.motochello.com